

INSTALLATION INSTRUCTIONS



CREEPER LOCK™ BEADLOCK WHEEL HUB COVER

302915-KIT (FOR 3-1/4" CENTER BORE JEEP TJ/JK WHEELS)

302916-KIT (FOR 4-1/4" CENTER BORE TOYOTA & JEEP CJ/YJ WHEELS)

302917-KIT (FOR 5-1/8" CENTER BORE 8-LUG WHEELS)

KIT CONTENTS



RECOMMENDED TOOLS

Ratchet & Socket Set

Clean Cloth

Isopropyl Alcohol

Thin Wall 19mm/21mm Flip Socket (P/N 170003-KIT)

CAUTION

1. Read all instructions completely and carefully before you begin.
2. Check to make sure the kit is complete and that no parts are missing (refer to the Kit Contents List on the first page of these instructions). If anything is missing, please contact Trail-Gear at 559.252.4950.
3. Park vehicle on a clean, dry, flat, level surface and block the tires so the vehicle cannot roll in either direction.
4. **Beadlocked wheels are intended for Off-Road use only.**

INSTALLATION INSTRUCTIONS



STEP 1

Clean the top surface of the Hub Cover thoroughly with isopropyl (rubbing) alcohol. Dry the top of the Hub Cover thoroughly with a clean cloth. NOTE: For best results, Steps 1-3 should be done in a room temperature or warmer (68°F minimum) environment.



STEP 2

Remove the backing from the dome label and apply to the center of the Hub Cover.



STEP 3

Press down firmly on the label with your fingers to ensure good adhesion. For best adhesion, keep the Hub Cover in a room-temperature or warmer environment (68°F minimum) for 24 hours after applying the label.



STEP 4

If supplied, install the provided O-ring onto the hub cover. Otherwise, you may skip this step.



STEP 5

Install the hub cover into the center bore of the wheel from the back side of the wheel.





STEP 6


Install the wheel onto your vehicle and torque the lug nuts to the torque specified in your owner's manual.



REPLACEMENT & SERVICE PARTS:

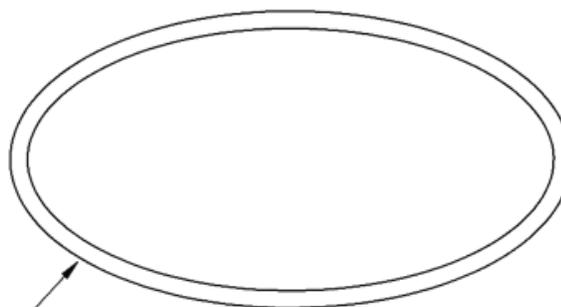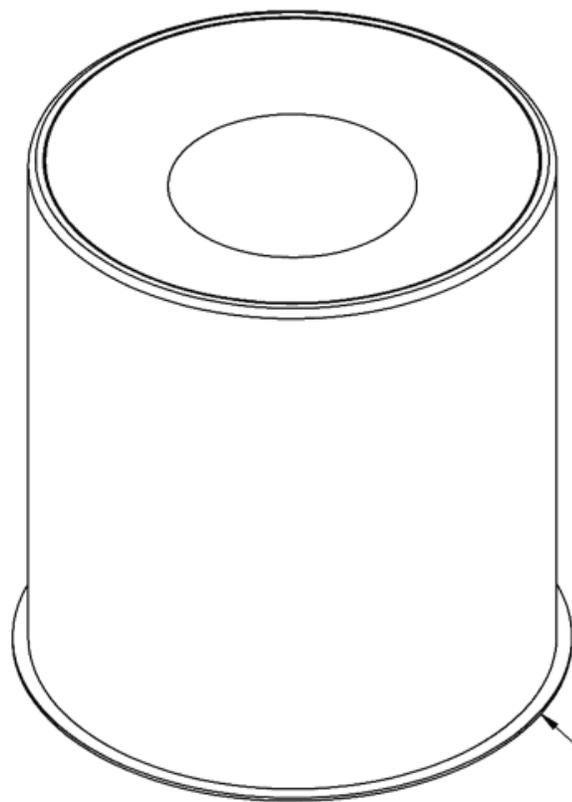

302914
(FOR TG 4-1/4" CENTER BORE WHEELS ONLY)

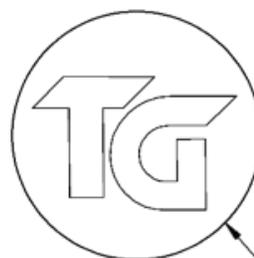

301427

302875 (FOR 3-1/4" CENTER BORE)
302876 (FOR 4-1/4" CENTER BORE)
302918 (FOR 5-1/8" CENTER BORE)